

CBD20S

Electric double pallet truck

- Operation Instruction
- Parts Catalogue



ZEDPD16PRO

Welcome to choose “CBD20S” electric pallet truck!

We hope our electric pallet truck will provide great convenience for your work!

- Please read the manual carefully before operation.
- This manual is universal manual. We reserve the right to modify technology of the electric truck. If there is anything in the manual that is not consistent with the actual truck, the actual truck should be considered correct and the manual is only for reference.


Warning

- Operator of the truck must strictly follow ISO 3691 “Safety Specification for Industrial Vehicles” and it is prohibited for untrained people to operate the truck.

Contents

1. Contour diagram.....	1
2. Brief technical parameters.....	2
3. Usage and scope.....	3
4. Structure.....	3
5. Use and operation instructions.....	3
6. Maintenance and upkeep.....	6
7. Common faults and trouble shooting.....	7
8. Use, maintenance and charge of the storage battery.....	8
9. Lists of accessories, spare parts and vulnerable parts.....	9
10. Packing and transportation.....	9
11. Warning (notes).....	11
12 . Structure diagram and principle diagram of the major parts.....	12
13. Packing list.....	13

1. Contour diagram

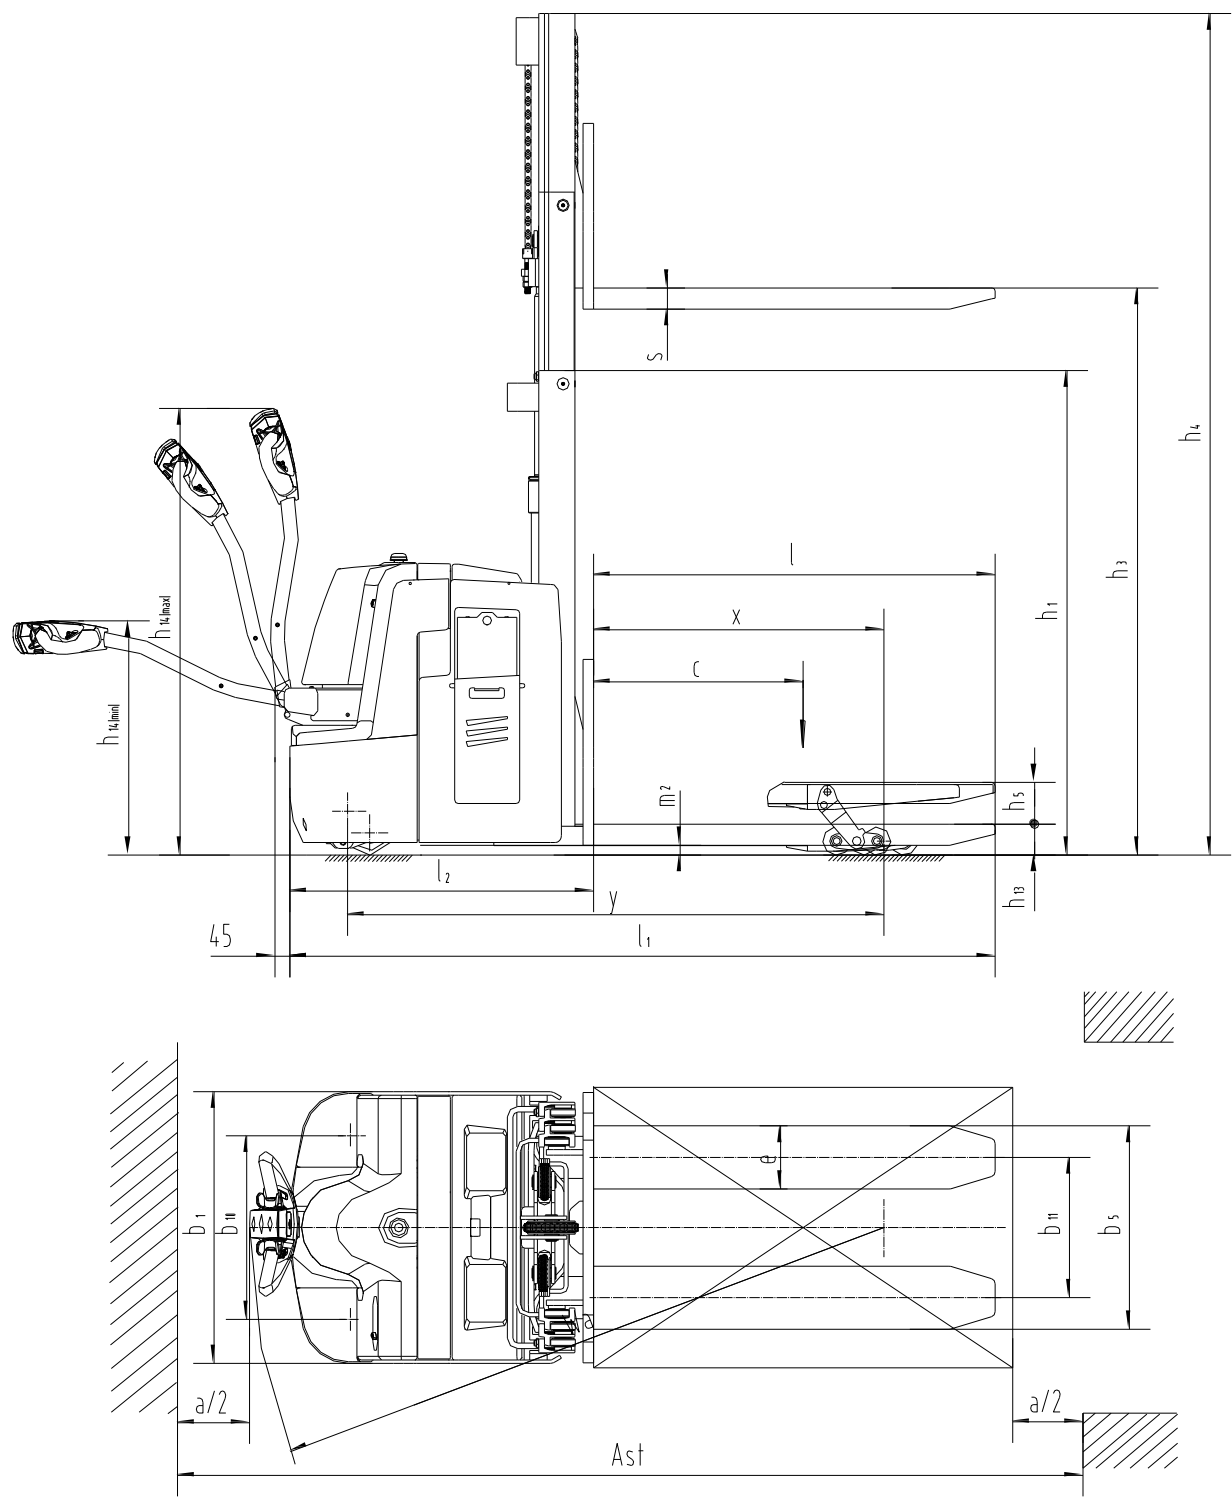

2. Brief technical parameters (CBD20S electric double pallet truck)

Characteristics	1.1	Manufacturer(abbreviated)		
	1.2	Model		ZEDPD16PRO
	1.3	Driving model : Electric(storage battery), diesel, gasoline, fuel gas		Electric(storage battery)
	1.4	Driving model (Manual, Walking, Stand driving, Seat driving ,Order picking)		Walking
	1.5	Rated load	Q(Kg)	2000
	1.6	Rated load, mast raised	Q(Kg)	1000
	1.7	Rated load, fork lifted	Q(Kg)	2000
	1.8	Load center distance	c(mm)	600
	1.9	Forward overhang	x(mm)	831
	2.0	Tread	Y(mm)	1535
Weight	2.1	Service weight (with battery)	Kg	950
	2.2	Axle load, front/rear, laden	Kg	1180/1770
	2.3	Axle load, front/rear, unladen	Kg	650/300
Wheel chassis	3.1	Wheels (rubber, high elasticity, pneumatic tyre, polyurethane wheel)		polyurethane
	3.2	Front wheel dimension		φ250×70
	3.3	Rear wheel dimension		φ80×70
	3.4	Additional wheel(dimension)		φ127×57
	3.5	Wheel number, front /rear (x=driving wheel)		1X+2/4
	3.6	Tread, front	$b_{10}(\text{mm})$	494
	3.7	Tread, rear	$b_{11}(\text{mm})$	400/470
Dimension	4.2	Height of mast, lowered	$h_1(\text{mm})$	1382 (Three-stage mast)
	4.4	Lift height	$h_3(\text{mm})$	2500
	4.6	Lift height, fork	$h_5(\text{mm})$	120
	4.9	Min. /Max. height of operation handle, in driving position	$h_{14}(\text{mm})$	780/1230
	4.15	Lowered fork height	$h_{13}(\text{mm})$	90
	4.19	Overall length	$l_1(\text{mm})$	1962
	4.20	Length to fork face	$l_2(\text{mm})$	862
	4.21	Truck width	$b_1(\text{mm})$	775
	4.22	Fork dimension	S/e/l(mm)	60×180×1100(1150/1220)
	4.25	Fork width	$b_5(\text{mm})$	580/650
	4.32	Wheelbase ground distance	$m_2(\text{mm})$	20
	4.33	Aisle width for pallets with 1000x1200 crossways	$A_{st}(\text{mm})$	2238
	4.34	Aisle width for pallets with 800x1200 lengthways	$A_{st}(\text{mm})$	2288
	4.35	Turning radius	$W_a(\text{mm})$	1705
Performance data	5.1	Traveling speed, laden/unladen	Km/h	5.5/5.8
	5.2	Lifting speed, laden/unladen	m/s	0.11/0.15
	5.3	Lowering speed, laden/unladen	m/s	0.2/0.18
	5.8	Max. gradeability, laden/unladen	%	6/12
	5.10	Traveling brake		Electromagnetic brake
Motor	6.1	Power of driving motor	kW	1.2
	6.2	Power of lifting motor	kW	2.2
	6.4	Battery voltage/rated capacity	V/Ah	24/210
	6.5	Battery weight	Kg	196
		Battery dimension (LXWXH)	mm	750×170×580
	8.4	Noise level at operator's ear, according to DIN12053	dB(A)	<70

Standard mast types			
One-stage mast			
h1	h2	h3	h4
1472	1000	1000	1490
Double mast			
h1	h2	h3	h4
1406	850	1600	2166
1606	1050	2000	2566
1856	1300	2500	3066
Three-stage mast			
h1	h2	h3	h4
1082	~	1600	2118
1212	~	2000	2508
1382	~	2500	3018

3. Usage and scope

CBD20S electric double pallet truck adopts storage batteries as the dynamic source and a AC motor as the driver, traveling through gear transmission. The lifting of the fork relies on the DC motor and the hydraulic transmission system. The up-and-down movement of the oil cylinders lifts the fork and the goods. As the traveling and lifting of the truck are electrically driven, it possesses the characteristics of energy saving, high efficiency, stable operation, easy operation, safe and reliable, low noise and no pollution, etc.

Environment for application:

- a. Elevation no more than 1200m;
- b. Ambient temperature no higher than +40°C and no lower than -25°C;
- c. When the ambient temperature reaches +40°C, the relative humidity should not exceed 50%; at a lower temperature, higher relative humidity is allowed.
- d. Hard and flat ground
- e. It is prohibited to use the truck in a flammable, explosive or corrosive environment with acid and alkali.

4. Structure (See also the structure diagram and principle diagram of the major parts)

The truck mainly consists of vertical drive wheel, steering device assembly, front frame, rear frame, lifting oil cylinder, hydraulic station, electric control system, connecting rod wheel supporter and balance wheel, etc.

5. Use and operation instructions

The electric double pallet truck adopts storage batteries as the power supply for goods lifting and handling and a AC motor as the power source to drive the truck and lift goods. Correct use and operation will bring you great convenience in your work but incorrect use and operation will damage the truck and bring you and your goods danger.

5. 1 Before operation :

5. 1. 1 Please check if the truck is in normal condition: Is there any oil leakage in the hydraulic pipes? Are the supporting wheels able to operate normally? Is there any block? The trucks with problems are prohibited for operation.
5. 1. 2 Check if there is any electric power in the batteries with the method indicated in Fig.I. Pull the general power switch out to turn on the general power supply, unlock the electric lock on the handle, check the electric energy meter on the instrument panel of the truck. If the zero end grid is bright, it indicates there is no electric power in the batteries and charging should be conducted at once. It is prohibited to operate the truck without electric power as that will greatly reduce the service life of the batteries and even damage the batteries.

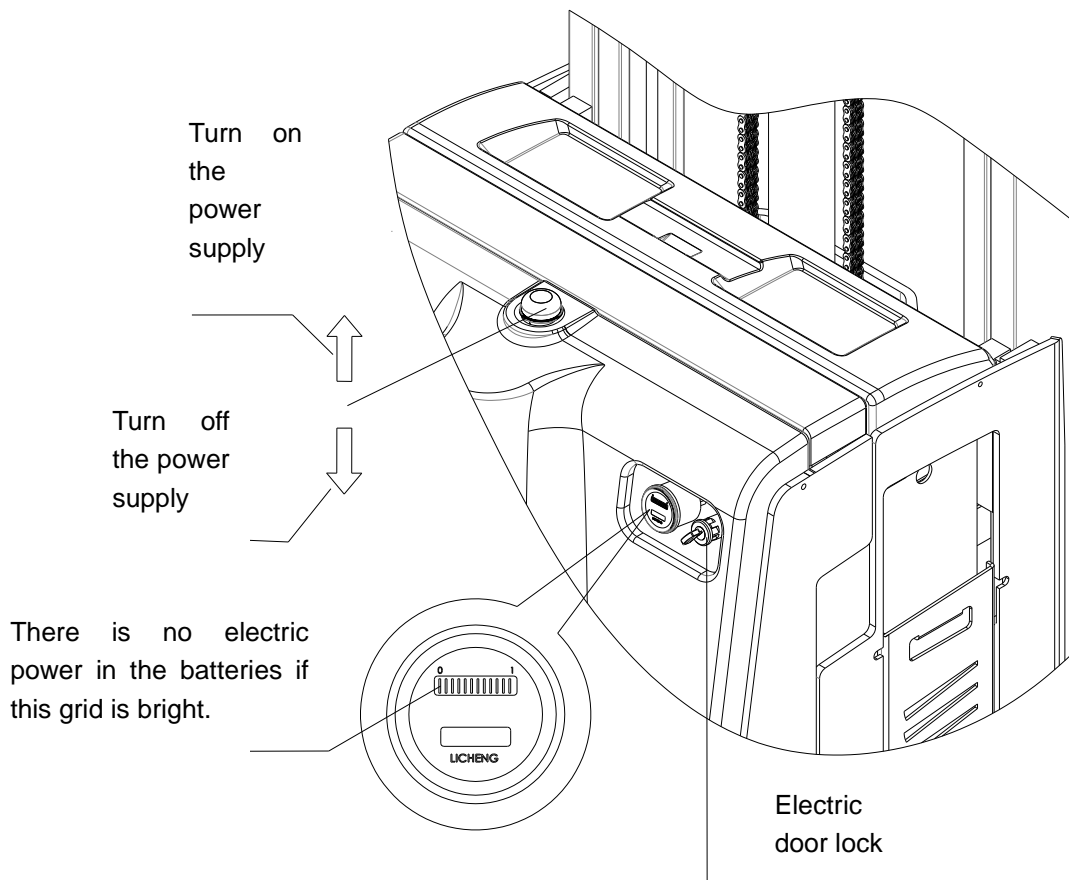


Fig.I


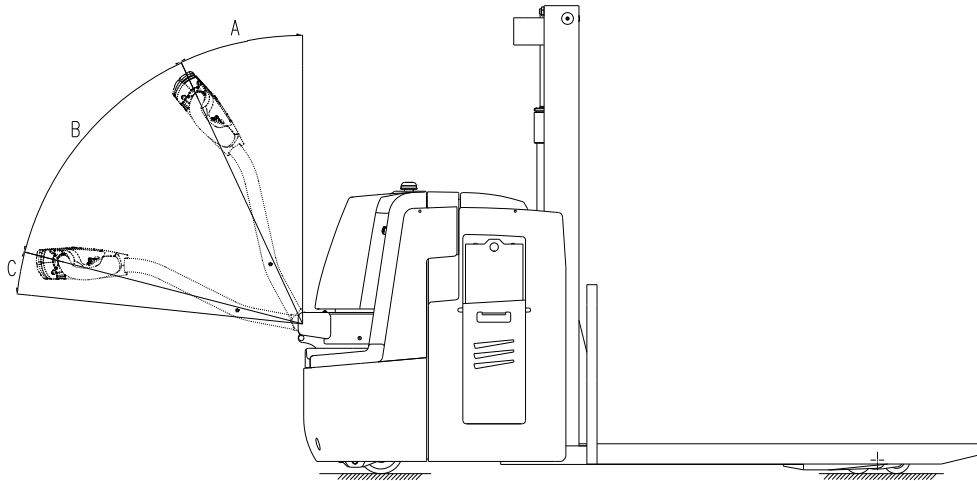


Fig.II

5. 1. 3 Check if the truck brake is normal. Check the lifting, dropping, forward and backward traveling of the truck to see if the actions are normal. Check if the emergency reverse action of the truck is normal with the method indicated in Fig.II:

Move the control handle to division A or division C as indicated in Fig.II and press the rise/lowering button on the control handle to see if the lifting and lowering of the fork is normal. Move the control handle to division B as indicated in Fig.II, slowly start the truck and press the handle to the horizontal position to see if the truck can travel or brake normally. Move the handle to division B as indicated in Fig.II, and press the emergency reverse switch button on top of the control handle to see if the truck can travel forward. After the above check, if there is no failure in the truck, it can be put into operation; if there is some failure, please repair it at once. It is prohibited to use trucks with problems.

5. 1. 4 Operation instruction of function keys on the operation handle is shown as below Fig.III:

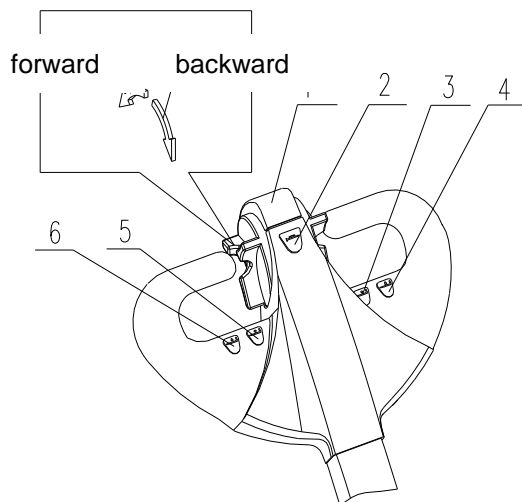

1. Emergency backward button
2. Horn
3. Lifting button, fork carriage
4. Lowering button, fork carriage
5. Lifting button, fork leg
6. Lowering button, fork leg

Fig.III

5. 2 In operation:


5. 2. 1 Note: A side-magnetic brake is installed on the shaft end of the drive wheel motor and there is a cam and a fine motion switch installed on the rotary shaft of the rotary arm. Only the rotary arm is at $30^{\circ} \pm 20^{\circ}$ (as indicated in Fig.II), the truck can get power and operate. Larger or less than the angle, the truck has no power and is braked. In that case, the truck can lift goods. When lifting goods, the truck cannot travel. As indicated in Fig.II, when the control handle is in division A or division C, the truck can only lift or lower but not travel; when the control handle is in division B, the truck can travel, lift as well as lower. The operation

position of the handle will not be specially described in the following descriptions, i.e. the handle must be in division A or C when the truck lifts or lowers and it must be in division B when the truck is traveling.

5. 2. 2 Operation of handling:

As indicated in Fig.I, pull out the general power supply switch, unlock the electric door lock. Control the travel knob, the truck moves forward when the knob point forward, and move backward when the knob backward (as indicated in Fig.III). After start, rotate the knob slowly whether it is with or without load to reach the rated speed smoothly. Move the truck near the goods pile (the fork head is 30cm from the goods piles). Press the lowering button, adjust the height of the fork to a proper position, insert the fork slowly and as deep as possible into the pallet of the goods. Press the lifting button till the bottom of pallet is $\geq 30\text{cm}$ from the ground. Stop lifting, move the truck to the desired location and then press the lowering button after the truck stops. After the fork is completely away from the pallet, drive the truck away from the pallet. The handling operation is finished.

5. 2. 3 Adjustment of the brake clearance:

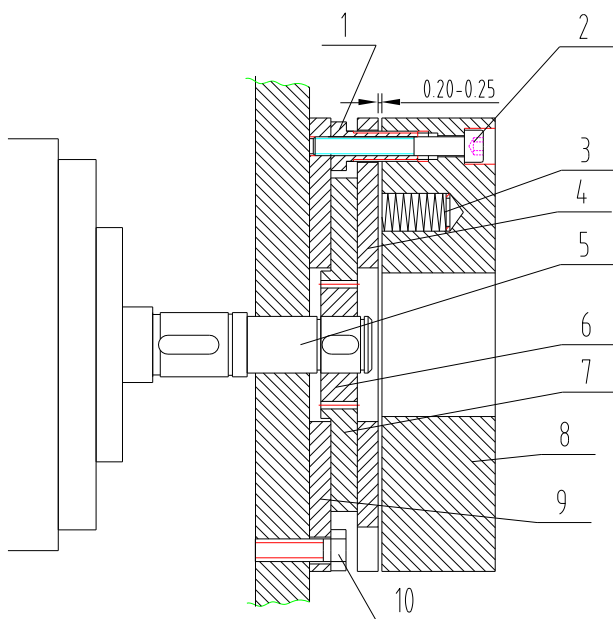

- | | | | |
|------------------------|-------------------|------------------|------------------------|
| 1 Hollow screw | 2 Fitting screw | 3 Spring | 4 Armature |
| 5 Motor shaft | 6 Spline housing | 7 Friction plate | 8 Electromagnetic coil |
| 9 Mounting cover plate | 10 Mounting screw | | |

The brake structure is indicated as the figure. After being used for a period of time, the performance of the brake may decline with the wearing of the brake plate or the brake plate can't be released. At this time, it is necessary to adjust brake clearance. As indicated in the figure in braking status, use a feeler to check the gap between the brake plate and magnetic steel, if the gap is more than 0.5mm, then it needs adjustment. Before adjustment, clean the dirt and dust on the friction plate. When adjusting, loosen the fixed screw 2, adjust the length of set screw 1, then fasten the retention screws. After adjustment, the clearance between the brake plate and magnetic steel should be fixed between 0.2~0.3mm. It has to be noted that even adjustment for three retention screws can make even clearance between the brake plate and magnetic steel after adjustment. After the adjustment, turn on the brake with 24v DC power. Then the brake will make clear sound.

retention screws. After adjustment, the clearance between the brake plate and magnetic steel should be fixed between 0.2~0.3mm. It has to be noted that even adjustment for three retention screws can make even clearance between the brake plate and magnetic steel after adjustment. After the adjustment, turn on the brake with 24v DC power. Then the brake will make clear sound.

! Be alert to obstacles when the truck travels. Slow down at turns.

! Switch off the power immediately when the truck is out of control to cut off the general power supply.

! There is a quick advance switch on the top of the handle assembly. The truck will advance quickly in a reverse direction when it is moving backward after pressing the switch in case of emergency.

6. Maintenance and upkeep

! Note: It is prohibited for untrained personnel to maintain the truck.

6.1 Whether the truck can operate satisfyingly depends on the efficient maintenance. When maintenance is ignored, the truck may pose a threat to human lives and cause property damage. Routine inspection should be conducted, when the truck is in operation, to eliminate abnormal conditions. Never use a truck with trouble to ensure safety and to prolong the service life of the truck.

6.2 Maintenance: The maintenance of the truck is divided into three levels, i.e. routine maintenance, level I maintenance and level II maintenance.

Routine maintenance: Daily maintenance is to clean the surface of the truck body and the surface of the storage battery and to examine the firmness of the power supply cable.

Level I maintenance: Level I maintenance should be performed once every week. Besides what should be done in daily maintenance, the operation situation of all the parts should be carefully inspected to see whether the operation is normal; whether there is any loose of the fasteners; is there any oil leakage at the hydraulic connection; is there any abnormal wearing and tearing in the mechanical parts; is there any abnormal temperature rise or sparks in the electric part, etc. If there is any abnormal situation, adjustment or trouble-shooting should be performed promptly.

Level II maintenance should be carried out as planned. Overall inspection should be performed for the truck according to the following requirements.

a. Maintenance for mechanical system: Once half a year. The major content is to add lubricant to the transmission gears and bearings of the drive wheel and the rotary joints, and examine the firmness of the fixing fittings, the flexibility of the wheels, as well as whether the forks can be lifted and lowered normally. Clean the dirt and dust on the friction plate of electromagnetic arrester and adjust the clearance to the proper distance. The operation noise of the truck should be no more than 70dB after maintenance.

b. Maintenance for hydraulic system: Once every year. Examine if the oil cylinder is normal, if there is any leakage externally or internally, if the hydraulic connection and the hose are reliable with no leakage. The hydraulic oil should be kept clean and generally it should be replaced every 12 months. ISO oil product standard is adopted for the hydraulic oil. When the ambient temperature is $-5\sim 40^{\circ}\text{C}$, HL-N46 or HL-N68 should be used; when the ambient temperature is $-35\sim -5^{\circ}\text{C}$, HV-N46 or HV-N68 should be used. The replaced waste oil should be treated according to the local rules and regulations.

c. Maintenance for electric equipment: Once every three months. First examine whether the specific gravity of the electrolytic solution of the storage battery [specific gravity at 1.24 (at 25°C) in tropical areas and 1.26 (at 25°C) in other areas] fits and the terminals are clean. Otherwise, the specific gravity of the electrolytic solution should be adjusted as required and the terminals should be cleaned and painted with Vaseline and tightened correctly. Examine if the connections of the electrical devices are reliable, the switches are normal and the insulation is ok (The insulation resistance between the electrical devices and the truck body should be above $0.5\text{M}\Omega$).

7. Common faults and trouble shooting

No.	Faults	Cause	Trouble shooting
1	The truck can't be started. (The contactor does not work.)	① The fuse of the control circuit is burn out.	Replace
		②The power switch contact is bad or damaged.	Repair or replace
		③The fuse of the major circuit is broken.	Replace
		④The contact of the electric lock switch is bad or broken.	Repair or replace
		⑤The connection of the storage batteries is loose or has fallen off.	Tighten
	The truck cannot be started (The contactor works.)	①The side-magnetic brake of the drive wheel does not suck and the truck is in a braked condition.	Repair or replace
		②The walking motor carbon brush is worn or bad contact between the diverter and the carbon-brush.	Repair or replace
		③ The magnet-exciting coil of the walking motor is broken or bad contact at the wire end.	Repair or replace
		④ Bad contact	Repair or replace
		⑤ There is a trouble at the MOSFET tube type	Repair or replace
2	The truck can only move forward (or backward)	①Bad or broken contact.	Repair or replace
		②There is a trouble in the circuit board.	Repair or replace
3	The truck can not stop while traveling	Broken contactor. The moving contactor cannot be reset.	Cut off the power supply at once and replace the contactor.
4	The brake does not work	①The erection bolt of the fine motion switch looses or is damaged.	Adjust or tighten the bolt or replace the fine motion switch.
		② The connecting wire of the side-magnet brake is loose or the side-magnetic brake is damaged	Tighten the bolt or repair the side-magnet brake.
		③The brake plate of the side-magnetic brake worn.	Replace the braking plates.
5	The steering has got stuck	①The bearing of the steering device is damaged.	Replace the bearing
		②The bearing of the steering device lacks lubricant or there is too much dust	Clean the bearing
6	Difficult steering of the drive wheel, noise and the motor is overloaded.	①The gear or bearing has got stuck because of foreign matters.	Clean or replace the bearing
		②There is clearance in the bearing installed or the fixing ring has come off.	Reinstall the ring and adjust the clearance.

		③The front wheel bearing is damaged.	Replace the bearing
7	The forks cannot be lifted.	①Overload	Reduce the load
		②The pressure of the overflow valve is too low.	Adjust the pressure higher
		③Internal abnormal leakage in the lifting oil cylinder.	Replace the seals
		④Insufficient hydraulic oil	Add appropriate quantity of filtered hydraulic oil
		⑤Insufficient voltage of the storage battery	Charge the battery
		⑥The operation handle is not horizontal or vertical, the motor of oil pump has not been turned on.	Improper operation
		⑦Damaged oil pump motor	Repair or replace
		⑧Damaged oil pump	Repair or replace
		⑨Damaged lifting button	Repair or replace
		⑩Electric lock is not unlocked or is damaged.	Repair or replace
		⑪ Seriously insufficient voltage in the cell.	Recharge
8	The forks cannot be lowered after rising	The electromagnetic valve is out of control.	Shoot the trouble
9	Reduced voltage of the storage battery(after charging)	①Individual battery is damaged.	Repair or replace
		②Low level of the electrolytic solution	Add electrolytic solution
		③Foreign matters in the electrolytic solution	Replace electrolytic solution

8. Use, maintenance and charge of the storage batteries

8. 1 Initial charge

Note: The charging environment requires good ventilation and there should be no open flame, otherwise explosion may occur.

8.1.1Initial charge should be conducted for batteries that have never been used. Before the initial charge, the surface of the batteries should be cleaned and the batteries should be examined for damage. The bolts should be tightened to ensure reliable connection.

8.1.2Pull out the sealing cover and replace it with the open cover type liquid hole plug and open the cover.

8.1.3When the charging equipment is able to operate normally, pour the sulfuric acid electrolytic solution with a density of 1.260 ± 0.005 (25°C) and a temperature of lower than 30°C into the batteries. The liquid surface should be 15-25mm higher than the protective board. In order to reduce the temperature rise caused by chemical reaction of the electrolytic solution and let the electrolytic solution fully penetrates into the pores of the polar plates and the baffles, the batteries should be placed still for 3-4 hours, not exceeding 8 hours. The initial charging can only be conducted when the temperature

of the solution reduces to below 35°C. (When necessary, the batteries can be put into cold water for temperature reduction). After the still placement, if the surface of the solution reduces, electrolytic solution should be added.

8.1.4 The sulfuric acid electrolytic solution is prepared with battery sulfuric acid complying with the state standard GB4554-84 and distilled water. Never use industrial sulfuric acid and running water. The standard temperature (25°C) and density of the electrolytic solution can be converted as follows:

$$D_{25} = D_t + 0.0007(t - 25)$$

Where: D_{25} : the density of the electrolytic solution at 25°C

D_t : the actual density of the electrolytic solution at a temperature of t °C.

t : temperature of the electrolytic solution when testing the density.

8.1.5 Sweep the electrolytic solution on the surface of the batteries and connect the positive and the negative poles of the battery group respectively with the positive and the negative ends of the DC power supply (charger). Turn on the power supply. First charge with 18A (the first stage current); when the voltage reaches 28.8V ($12 \times 2.4V = 28.8V$), change to the second stage current 9A and continue to charge. The temperature of electrolytic solution during the process of charging must not exceed 45°C and when it is close to 45°C, the charging current should be reduced by 50% or the charging should stop temporarily. Wait till the temperature reduces to 35°C to continue the charging. The charging time, however, should be properly prolonged.

8.1.6 Fully charged basis: When the voltage during the second stage charging reaches 31.2V ($12 \times 2.6V = 31.2V$), the variation of the voltage is no greater than 0.005 (V); the density of the electrolytic solution reaches 1.280 ± 0.005 (25°C), no obvious variation in 2 hours and there are fine air bubbles appear violently, it can be deemed that the batteries are fully charged. The charged power capacity is 4-5 times of the rated capacity and the charging time is about 70 hours.

8.1.7 In order to accurately control the sulfuric acid content of the electrolytic solution, the electrolytic solution density of the batteries should be examined during the last period of charging. If there is inconsistency, adjust with distilled water or sulfuric acid with a density of 1.40. The electrolytic solution density and the liquid surface should be adjusted to the stipulated value within two hours in the charging state.

8.1.8 After the initial charging is completed, the surface of the batteries should be cleaned. Close the cover of the open cover type liquid hole plug and then the batteries can be used.

8. 2 Use and maintenance

8.2.1 In order to guarantee the service life of the batteries, the batteries in use should be fully charged. Insufficiently charged batteries must not be used. During the process of use, close attention should be paid to the discharge extent. Over discharge is prohibited---the voltage reduces to 1.7V per battery (when the total voltage reduces to $1.7V \times 12 = 20.4V$). When the density of the electrolytic solution reduces to 1.17, discharging should be stopped and charging should be conducted at once. The batteries should not be placed idle for a long period of time. The supplementary charging frequently conducted during the process of use is called common charge.

8.2.2 Common charge: The first stage current of common charge is 26A and that of the second stage is 13A. The charging method is the same as that of initial charge. The charged volume is 130-140 % of the discharged volume and the charging time is about 15 hours.

8.2.3 The batteries in normal use should avoid over-charge, but over-charge must be properly conducted for the batteries in following situations, i.e. equalizing charge.

- a. The "lag-behind" batteries--- batteries with a voltage lower than that of the other batteries in the discharging process and the batteries having been repaired for failure. (When equalizing charge is conducted, the positive and negative poles of the "lag-behind" battery should be

respectively connected with the positive and negative ends of the charger, the DC power supply, and the charge should be conducted independently.).

- b. Equalizing charge should be conducted for the batteries in normal use every 2-3 months.
- c. Equalizing charge should be conducted for the batteries that have not been used for a long period of time before use.

8.2.4 Equalizing charge:

- a. Charge with a 4A current
- b. When the charge voltage reaches 31.2V ($12 \times 2.6V = 31.2V$) and air bubbles occur in the electrolytic solution, the current should be reduced by 50% (2A) and continue to charge.
- c. When the batteries are in the state of fully charged, stop for 0.5 hour and charge again with a 1A current for one more hour.
- d. Stop for another 0.5 hour and charge with a 1A current for another one hour.
- e. Repeat according to item d till air bubbles occur violently in the batteries once the charger is switched on.

8.3 Storage

8.3.1 Batteries should be stored in a clean, dry and well ventilated warehouse with a temperature of 5-40°C. The valid shelf life is 2 years. The batteries should be kept according to the following requirements during storage:

- a. No direct sunshine on the batteries and at least 2m away from heat source.
- b. Avoid contacting with any harmful substances. No metallic matters are allowed to drop into the batteries.
- c. The batteries should not be placed upright down and should not be impacted mechanically or heavily compressed.
- d. The batteries must not be stored with electrolytic solution. When it is required in special situation that the batteries must be stored with electrolytic solution, the batteries should be fully charged and the density and the liquid surface of the electrolytic solution should be adjusted to the stipulated values. When the storage period comes to one month, the batteries should be complementarily charged with the common charge method.

9. Lists of accessories, spare parts and vulnerable parts

No.	Name	Use position	Type & specification	Quantity	Remarks
1	Key to electric lock	Unlock the electric lock		2	
2	Charging plug and socket	Matched with the charger		1	
3	Fuse	Electric equipment	10A	1	
4	Fuse	Electric equipment	160A	1	
5	Sealing ring	Oil cylinder	UHS35	1	Side cylinder
6	O type seal ring	Oil cylinder	35.5×2.65	1	
7	O type seal ring	Oil cylinder	45×2.65	1	
8	Dustproof ring	Oil cylinder	DH35	1	
9	Sealing ring UHS56	Oil cylinder	56×66×6	1	Medium cylinder
10	O type seal ring	Oil cylinder	56×3.55	1	
11	Dustproof ring DH56	Oil cylinder	DH56	1	
12	O type seal ring	Oil cylinder	70×3.55	1	

10. Packaging & transportation

The truck is packed with a tray wooden case. During transportation, turnover and upside-down are not allowed. Collision is not allowed when lifting and loading onto the truck. Do not damage the outward surface of the truck when opening the package.

11. Warning (points for attention)

- 11.1 Read the manual carefully before operation and know well the performances of the truck.
- 11.2 It is strictly forbidden to press the lift or lower buttons while the truck is walking and frequently switching the two buttons, which might damage the truck and the goods.
- 11.3 Do not shake the lever rapidly or with high frequency.
- 11.4 It is not allowed to rapidly put heavy goods onto the forks.
- 11.5 The truck should not be overloaded. When overloaded, the truck will not be operated normally.
- 11.6 The center of gravity of the goods should be placed between the two forks, otherwise, the forks will be damaged and the goods will fall down in the process of operation.
- 11.7 Loose and unstable goods are not allowed to load onto the truck.
- 11.8 Do not put the goods on the forks for a long period of time.
- 11.9 Turning rapidly on narrow road is strictly forbidden. In order to ensure the safety of the people and goods, the truck should turn slowly in this situation.
- 11.10 When the truck is not in use, the forks should be lowered to the lowest position.
- 11.11 Never put any part of human body under heavy goods and forks.
- 11.12 The truck is applicable for use on flat ground and should never be parked on slope for a long period of time.
- 11.13 Over-load or over-slope operation is strictly forbidden. Otherwise the wheel will slip, damaging the wheel and the motor. The safety of people and goods will be affected as well.
- 11.14 Repairing on one's own before training is forbidden.
- 11.15 Operation of the truck under the stipulated voltage 20.4V is strictly forbidden.
- 11.16 It is strictly forbidden to directly connect the plug with AC power supply for charge.
- 11.17 When the lift height of fork exceeds 300mm, the truck must travel at the lowest speed. Meanwhile the continuous travel distance shall not be over 2meters.

12. Structure diagram of the major parts

The hydraulic principle diagram

The electrical principle diagram

13. Packing list

Packing List of CBDS Electric Pallet Truck

Consignee:

Ex-work No.:

Contract No.:

Ex-work Date:

SN	Name	Quantity	Net weight (kg)	Dimension (L×W×H)	Remarks
1	CBDS electric double pallet truck	1			A complete set.
2	Accessory bag	1			Technical documents, accessories and spare parts.

Note: 1. The following documents are in the file bag:

- | | |
|---|----------|
| ① Operation manual of CBDS electric double pallet truck | 1 volume |
| ② Qualification certificate | 1 copy |
| ③ Packing list | 1 copy |


2. Accessories and spare parts

SN	Name	Use position	Type & specification	Quantity	Remarks
1	Key to electric lock	Unlock the electric lock		2	
2	Charging plug and socket	Matched with the charger		1 set	With no charger for built-in type
3	Fuse	Electric equipment	10A	1	
4	Fuse	Electric equipment	160A	1	
5	Sealing ring	Oil cylinder	UHS35	1	Side cylinder
6	O type seal ring	Oil cylinder	35.5×2.65	1	
7	O type seal ring	Oil cylinder	45×2.65	1	
8	Dustproof ring	Oil cylinder	DH35	1	
9	Sealing ring UHS56	Oil cylinder	56×66×6	1	Medium cylinder
10	O type seal ring	Oil cylinder	56×3.55	1	
11	Dustproof ring DH56	Oil cylinder	DH56	1	
12	O type seal ring	Oil cylinder	70×3.55	1	


Consigner: Ningbo Ruyi Joint Stock Co., Ltd

Fork leg lifting cylinder

Fork lifting cylinder

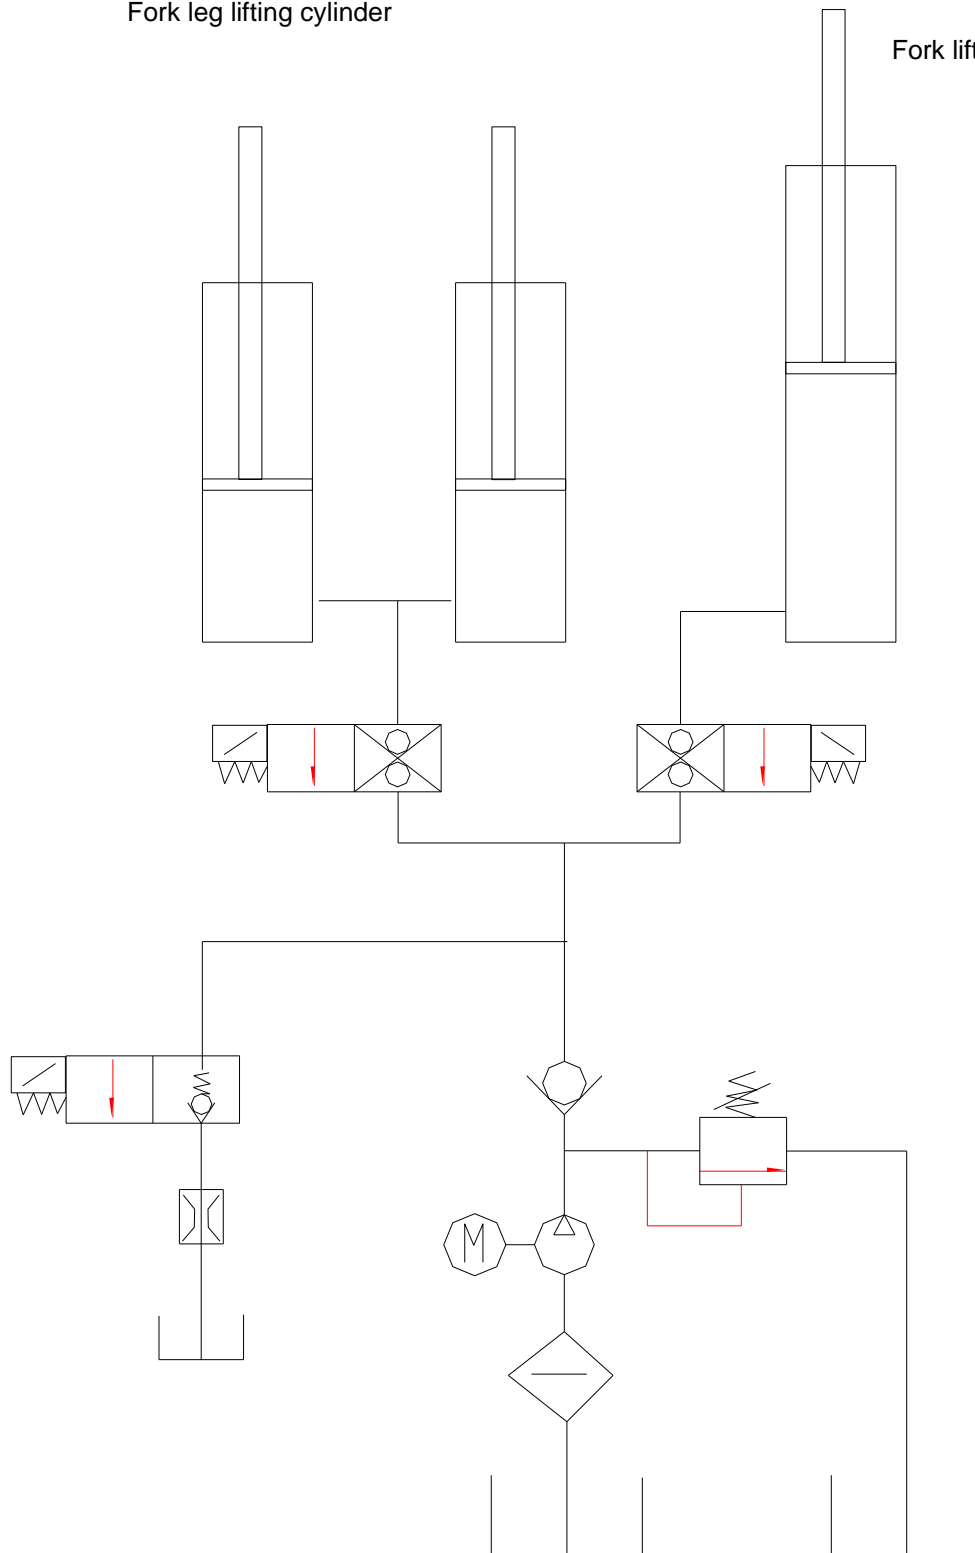

Hydraulic Principle Diagram

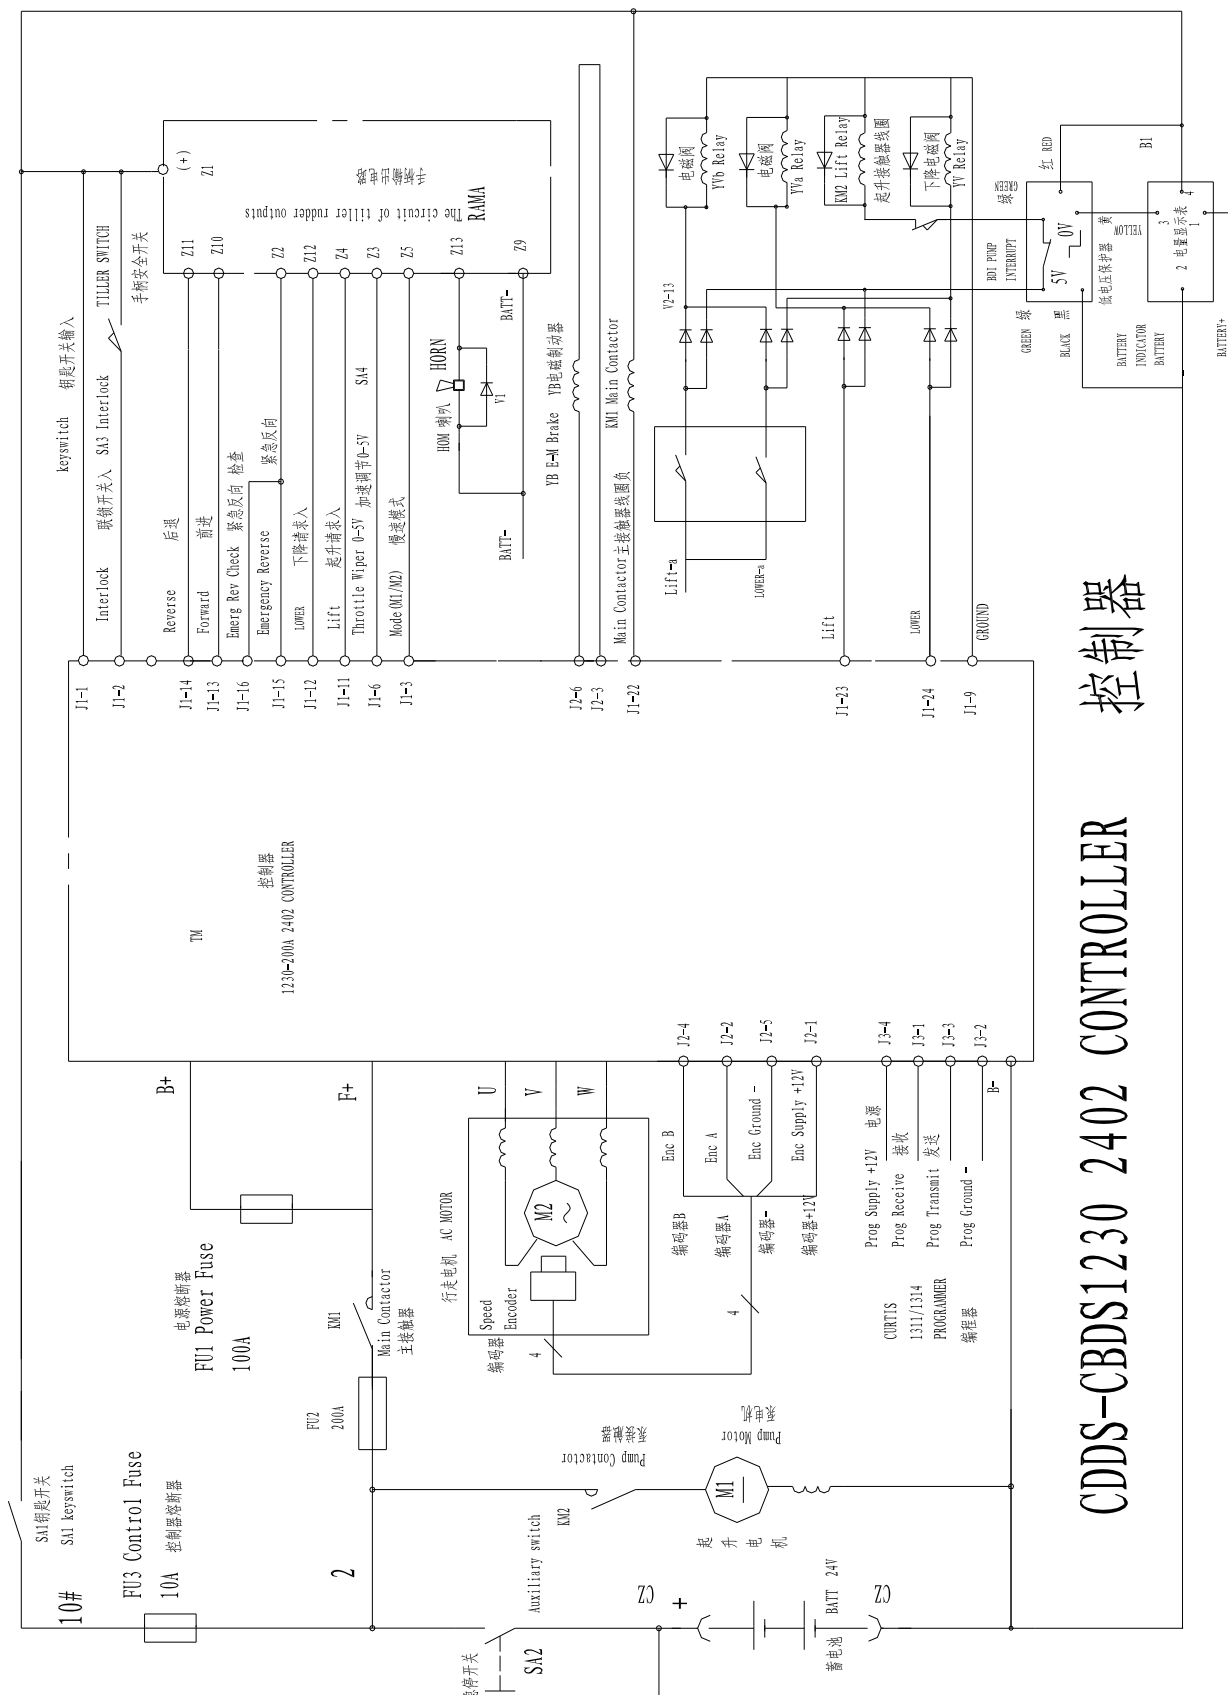

控制器

CDDS-CBDS1230 2402 CONTROLLER